

AR-FLB-50W-220V White

SAFETY INSTRUCTION:

- Read instructions carefully before attempting to install • fixture. Retain instruction for future reference.
- Disconnect power before installing or servicing. This fix-٠ ture must be wired in accordance with the National Electrical Code and applicable local codes and ordinances.
- All wiring should be performed by a qualified electrician. . The input wire can not be randomly replaced. This fixture is for outdoor use and should not be used in areas with limited ventilation or high ambient temperatures.
- If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

TECHNICAL PARAMETERS

- Voltage •
- **Power Factor** 0.95
- Tempered Glass Size 280*227*4mm •
- Hole Size •

9.0x38.0mm

85-264V AC

Interval Space •

Max. Projected Area

- Centre Hole Size •
 - Weight
- Size

•

3.3kg

158.0mm 12.0mm W290mm x H235mm x L150mm 22 x 22 m

INSTALLATION-SURFACE MOUNTING:

- 1. Do not remove any part of the fixture.
- 2. Specification please see the label on fixture.
- 3. Use expansion bolts to secure the fixture on mounting surface.
- 4. Keep enough length wires to ensure adjusting angle unhindered.
- 5. Connect wires to main power supply, brown wire to live, blue wire to neutral, green wire to ground.
- 6. Please mention the main specification as following before wiring.





